



HS13 Installation Instructions

Fits John Deere 750C

Before you begin:

Tools Needed

- Lifting Device
- 1" Wrench (2)
- 12MM Wrench (1)
- 20MM Wrench (1)
- Rubber Mallet
- WD-40 (recommended)


**Always follow tool manufacturer's instructions for use*

Parts List:


- Fasteners (Grade 8)
 - 12MM x 40MM Bolt (8 pcs)
 - 12MM Lock Washer (8 pcs)
 - 12MM Flat Washer (8 pcs)
 - 20MM x 50MM Bolt (4 pcs)
 - 20MM Lock Washer (4 pcs)
 - 20MM Flat Washer (4 pcs)
 - 1" x 4-1/2" Bolt (4 pcs)
 - 1" Lock Nut (4 pcs)
- SP0146 Sweep Body (1 pc)




- SP0101 RH Cab Bracket (1 pc)

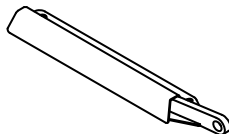


- SP0100 LH Cab Bracket (1 pc)

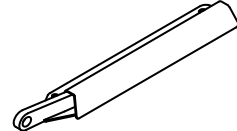

- SP0096 RH Hard Nose Bracket (1 pc)



- SP0097 LH Hard Nose Bracket (1 pc)



- 9S5187D Rubber Mount (4 pcs)



- Cab end (2)
- Hard nose end (2)

- 8P5244D Rubber Washer (8 pcs)



- Cab end (4)
- Hard nose end (4)

Thank you for your purchase.

**Any questions or comments can be directed to
1-800-445-1917**

Assembly

- Remove existing Light Brackets in order to replace with Hard Nose Brackets (light brackets) provided.



- Bolt on both Hard Nose Brackets (Part# SP0096 RH & SP0097 LH). (See Figure 1). Use the following parts...
 - (1) RH Hard Nose bracket (Part# SP0096)
 - (1) LH Hard Nose bracket (Part# SP0097)
 - (8) Bolts 12MM x 40MM
 - (8) Flat Washers 12MM
 - (8) Lock Washers 12MM



Figure 1

- Place existing lights in new Hard Nose Brackets (Part# SP0096 RH & SP0097 LH).
- Bolt on both Cab Brackets (Part# SP0101 RH & SP0100 LH). Use the following parts...
 - (1) RH Cab Bracket (Part# SP0101)
 - (1) LH Cab bracket (Part# SP0100)
 - (4) Bolts 20MM x 50MM
 - (4) Flat Washers 20MM
 - (4) Lock Washers 20MM
- Using a rubber mallet insert the 4 Rubber Mounts (Part# 9S5187D) in the stobs of all 4 mounts.

****NOTE**** *It is recommended that each Rubber Mount be sprayed with WD-40 before insertion.*

- Lift Sweep Body (Part# SP0146) into place with a lifting device.
- Bolt Sweep Body (Part# SP0146) to both Hard Nose Brackets (Part# SP0096 RH & SP0097 LH). Place a Rubber Washer on each side of mount stob (Part# 8P5244D). See figure (2). Use the following parts...
 - (1) Sweep Body (Part# SP0146)
 - (2) Bolts 1" x 4-1/2"
 - (2) Lock Nuts 1"
 - (4) Rubber Washers (Part# 8P5244D)



Figure 2

- Bolt Sweep Body (Part# SP0146) to both Cab Brackets (Part# SP0101 RH & SP0100 LH). Place a Rubber Washer on each side of mount stob (Part# 8P5244D). Use the following parts...
 - (1) Sweep Body (Part# SP0146)
 - (2) Bolts 1" x 4-1/2"
 - (2) Lock Nuts 1"
 - (4) Rubber Washers (Part# 8P5244D)
- Tighten all bolts.